

KENCOVE ENERGY LIMITER (MEL)

The Energy Limiter automatically limits the amount of power drawn from flood or vegetation, allowing upper fence wires to remain hot. Once installed, it is not necessary to switch the bottom wire off when vegetative growth makes it hard to keep the fence hot. The wire will automatically become hot again when the short is sufficiently reduced.

- 1) Connect one lead to the top energized fence wire.
- 2) The remaining lead should be connected to the wire that is to be allowed to go dead during flooding or exposure to excessive weed growth. A wire tap is recommended for a positive connection.

