


10-20 Watt Solar Panel Mounting Bracket

Mounting Instructions



Step 1:

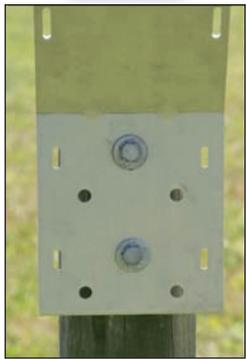


Step 2:



Attach bracket to wood post with two 3/8" x 4" lag screws (included). **Note:** Additional holes on base of bracket allow mounting on pipe, t-post, etc. using either hose clamps or 2 1/8" U-bolts (not included).

Once bracket is secured to the post, slide panel into the top of the bracket. This will safely hold the panel in place while self-tapping screws are attached.

Step 3:

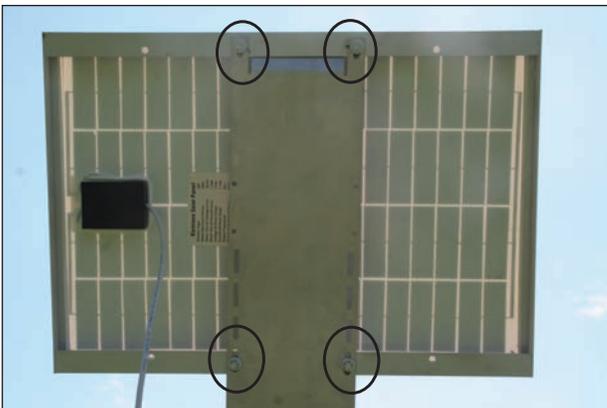

Center the panel and then secure it to the bracket with four self-tapping screws (included) as circled. Use the slots on the bracket to determine screw placement.

Step 4:



Once panel is secured, attach a solar charge controller (MSC5LVD) to the bracket with zip ties (included) using the four small holes.